

Contents

1. Cruiser Micro MP3 Companion
2. Clip
3. Earbuds
4. AAA Alkaline Battery
5. Quick Start Guide

Getting Started

1. Insert AAA Alkaline Battery
 - a. Slightly push down the battery door and pull outward from the MP3 companion
 - b. Insert one AAA Alkaline battery with the positive side facing out
 - c. Close the battery door until it locks in place
2. Place songs on the Cruiser Micro USB Flash Drive (UFD)
 - a. You can Drag and drop files onto the Cruiser Micro or transfer using your favorite Music software
 - b. Cruiser Micro MP3 Companion can use MP3 and WMA files
3. Insert the Cruiser Micro into the Cruiser Micro MP3 Companion
 - a. Insert the side that the capacity is Facing the LCD screen of the Cruiser Micro MP3 companion
 - b. Make sure it is snugly in the Socket
4. Turn on the Cruiser Micro MP3 Companion


Basic Operation Manual

1. Using your player
 - a. To turn on your Player
 - i. Press and Hold the Play and Pause button until your player turns on
 - ii. The SanDisk logo will appear on your player and it will begin to operate



- b. To Turn off your Player
- i. Press and hold the Play and Pause button until after the Goodbye message disappears
- 2. Music Playback
 - a. Player continues to play where it left off if the unit was turned off while playing
 - b. If it starts “FRESH”, it will start playing with the first song in the Root Directory. (Or the first song in the First directory if there are no songs on the root)
 - c. If no tracks are available, instead of the artist/track information it will say “No Song”
 - d. To play the next song, press the “Menu Selection” button lightly to the right once
 - e. To Fast forward hold the “Menu Selection” button to the right
 - f. To Fast Reverse hold the “Menu Selection” button to the left
 - g. To play previous song, press the “Menu Selection” button to the left


3. Music Playback Display

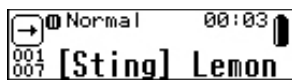

- Artist name – track name (scrolling)
- Elapsed time
- Track #/Total#
- Play/Pause state
- EQ selection
- Battery indicator

- a. Artist Track information is derived from the MP3 tag. If not available, the file name will be displayed. (Without the MP3 extension)
- b. If the “Artist name-Track name” is too long to display on screen, it will scroll across screen. (It will repeat after the last letter leaves the screen on the left)
- c. It will continue to scroll in a loop for the entire time the song is playing


4. Volume Control Display

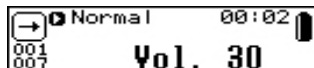

- a. Press the Volume control up (+) button once to move the volume up 1 level
- b. Press the Volume control down (-) button once to move the volume down 1 level
- c. Press and hold the volume up button to continuously move the volume up

- d. Press and hold the volume down button to continuously move the volume down


5. Menu Display

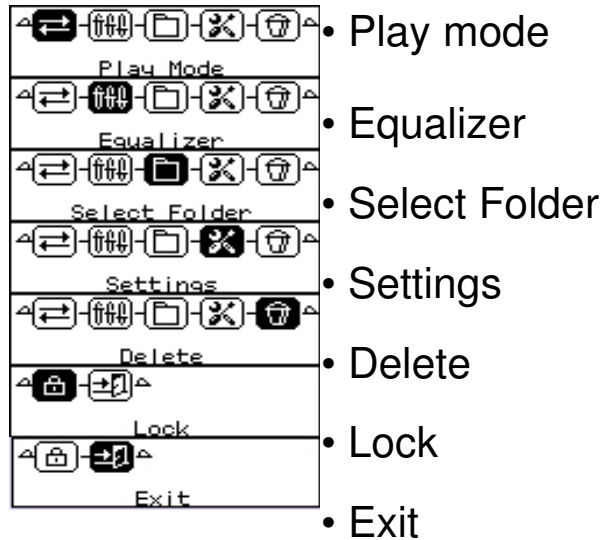

- a. Press and hold the “Menu Selection” button to enter the Menu display
- b. To move forward through the menus press the “Menu Selection” button to the right once to move to the next selection. Holding the button to the right will scroll through all options quickly
- c. To move backward through the menus press the “Menu Selection” button to the left once to move to the previous selection.
- d. To Exit the Menu Display, move to the Exit selection and press once. Player will automatically exit the Menu mode if you leave it idle for several seconds


6. Menu_Play mode

- a. Normal

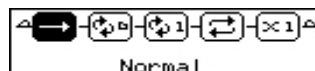


- i. Selecting Normal means Normal mode is enabled, each track is played in a standard order from the first track to the last track

- b. Shuffle

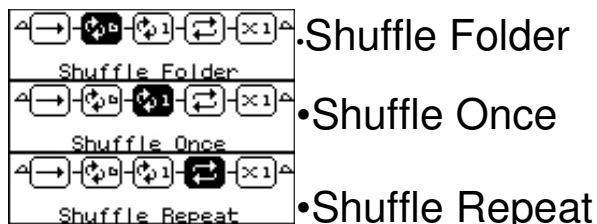


- i. Selecting Shuffle means Shuffle mode is enabled.
Shuffle mode can be used to shuffle all tracks once (or all tracks in one folder) or to shuffle all tracks repeatedly

c. Track Once

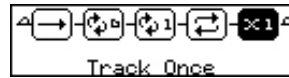

- i. Selecting Track Once means Track once mode is enabled and playback will end once current track ends

d. Repeat

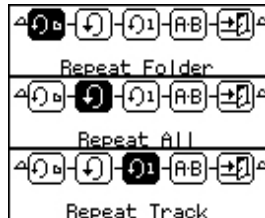

• Repeat Folder

• Repeat All

• Repeat Track

- i. Selecting Repeat means Repeat mode is enabled. This offers 3 choices. You can repeat a single track, all tracks or all tracks in a folder

7. Menu_Equalizer

- a. Your player allows you to enhance your listening experience

b.



• Normal

• Pop

• Rock

• Soft Rock

• Techno

• Dance

• Party

• Reggae

• Jazz

• Classical

• Live

• Voice

• Bass Boost



8. Menu_Folder

- a. You can move to the ROOT folder by selecting the folder icon in the menu list and pressing the “Menu selection” button down once. Once you have selected the ROOT folder your player will return to “Play” mode
- b. You may also select any other folders on the Cruzor Micro using this icon
- c. To Exit the Folder options select the Exit icon and press the “Menu Selection” button down once

9. Menu_Setting

- a. Selecting the Settings Button produces the following selections

Contrast: Use this icon to select the players contrast



Backlight: Use this icon to choose the length of time for the backlighting to remain active




Language: Choose the language displayed on Player




Idle Shutdown: Sets the length of time the player can be idle before shutting down




Information: Contains information for your player

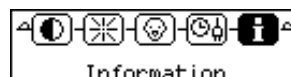

LCD Orient: reverses orientation of the text

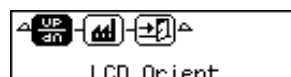

Factory Setting: Returns the player to factory Settings

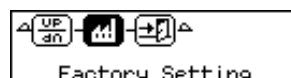

- b. To move forward through the menus press the “Menu Selection” button to the right once to move to the next selection
- c. To move backward through the menus press the “Menu Selection” button to the left once to move to the previous selection
- d. To Exit the Menu Display, move to the Exit selection and press once

10. Menu_Lock

- a. Allows you to Lock or un-lock your player
- b. While locked no buttons will be usable
- c. Contains a Lock icon, and Un-lock icon and an Exit Icon

Warranty

(Insert Warranty here)

Register On-Line

Please register your Cruzer Micro MP3 Companion at [http://www.sandisk.com/retail technical support registration.asp](http://www.sandisk.com/retail_technical_support_registration.asp)

Technical Support

Technical support is available M-F 7am-4pm PST

To call toll free the number is 1-866-726-3475

Or email support at support@sandisk.com or for European customers europesupport@sandisk.com

Specifications

- 1. Audio output = 5mW
- 2. Freq. Response = 20 ~ 20 KHz
- 3. THD = 0.05%
- 4. SNR = up to 90dB
- 5. ID3 tag support (v.1 & 2)
- 6. Supports MP3 and WMA file formats
- 7. Battery Life standard name brand AAA = Up to 7 hours with included ear buds and using only MP3 files

8. MP3 Companion saves settings when you power it off. When you power it back on it will resume at same location as where it left off
9. Read only files may not be deleted in the MP3 Companion

Basic Troubleshooting

1. If the unit will not power on, check the following
 - a. Check to make sure the cap for the battery is securely locked in place
 - b. Check to make sure the battery is inserted correctly. (Positive side up)
 - c. Check to make sure the battery is still good
2. If the display says “No Song”, check the following
 - a. Check to Make sure the Cruzer Micro is securely inserted in the MP3 Companion
 - b. Check to make sure the files on the Cruzer Micro are MP3 or WMA file formats
3. If you can not hear any music but it appears to be playing
 - a. Check and make sure the ear buds are securely inserted
 - b. Check to make sure the volume level is adjusted high enough
 - c. Check to make sure the ear buds are functioning properly